

Größentabelle / Sizing Chart Keyboards & Recording

CASIO		Kronos 73 Tasten	29127	GT10	28056	P 60/60S/70	29138
CTK 120/230	25097	Kronos 88 Tasten	29145	GT Pro	28049	P 80/85/90/95	29138
CTK 620L/691	29098-28098	Krome 61 Tasten	28101	GW 8	28106	P 100/250/300	29147
CTK 700/3000	25097	Krome 73 Tasten	29127	JP 80	29127	P 155/255	29138
CTK 800/900	29098-28098	Krome 88 Tasten	29145	Juno-Di	28101	P 120/120S	29138
CTK 6200/6250/7200	25097	M1	28106	Juno-DS 76	25127	P 140/140S	29138
LK 30/50	28107	M50-88 T	29142	Juno-G	28106	P 515	29138
LK 35	25097	M50-73/61 T	28106	Juno STAGE	29130	PF 2000	29148
LK 40/43	25097	M3 61	28106	Prelude	28106	PSR A-300/A-350	25097
LK 86	25097	M3 73	29130	RD 300 GX/300 NX	29145	PSR A-1000	29098-28098
LK 93 TV	29098-28098	M3 88	29147	RD 300 SX	29142	PSR A-2000	29098-28098
PX 100/110/160	25133-29138	Oasys 88 Tasten	29148	RD 600	29142	PSR E213/313/223	25097
PX 300/310/360	25133-29138	PA1X	29114	RD 700 GX/NX	29145	PSR E233/323/333	25097
PX 500/510	29138	PA1Xpro	29136	RD 700 SX	29142	PSR E353/E363	25097
WK1600-3800	29131	PA2Xpro	29130	RD 800/2000	29142	PSR E403/413	25097
Privia 110/120	29138	PA3X/4X 61 T.	25097	RK 100/500	29113	PSR E433/443/453	25097
CLAVIA		PA3X/4X 76 T.	29130	SH-201	25097	PSR 172/180/185	25097
Nord Compact	29113	PA 500	28107	VP 770	25097	PSR 175	29098-28098
Nord Stage 76	29113	PA 700/600/300	28106	VR-770	29127	PSR 290-295	25097
Nord Stage 88/3-88	29130	PA 800	29113	V-Synth	29114	PSR 350/450/760	29098-28098
Nord elect. 3/61T	25097	PA 900/1000	28106	V - Piano	29148	PSR 550/1000	29098-28098
Nord elect. 3/73T	29113	R3	25065	SOLTON		PSR 1100	29098-28098
Nordstage EX comp.	29113	SP 200 RS	29138	PK 160/360	29098-28098	PSR 1500/2100	29098-28098
Nord electro 2/61T	25097	SP 250	29136	PK 760	29131	PSR 3000	29098-28098
Nord electro 2/73T	29113	SP 280	29136	TECHNICS		PSR R200	25097
Nord C2/C2D	29098-28098	SV 188	29138	SX-P30/P50	29138	PSR S500/650	25097
Nord Lead/Wave61T	28101	TR 61	28106	WALDORF		PSR S700/900/670	29098-28098
DYNACORD		TR 76	29130	Q und Q+ Serie	28106	PSR S710/910/770	29098-28098
MP 7	28049	TR 88	29142	YAMAHA		PSR S750/950/970	29098-28098
Powermate 600	28049	KURZWEIL		AN1X	28107	PSR S 775	29098-28098
EMU		K 2600	29131	CP1/5	29140	PSR SX 700/900	29098-28098
xboard 25	25048	PC 88/88 MX	29142	CP-4	29138	PSS 31	25083
xboard 49	25083	RG 100/200	29131	CP-33	29138	S 80/90	29136
xboard 61	29098-28098	SP 88/88 X	29138	CP-40	29138	S 90 ES	29145
GEM		M-AUDIO		CP 300	29147	S 70 XS	29136
GK 360	25097	Keystation Pro88	29142	DD 35	25048	S 90 XS	29145-29147
GK 380	28106	O2	25048	DD 55	28056	SY 22/35/50	28101
Promega 2	29131	Oxygen 8	25048	01X	28049	SY 55	25097
Promega 3	29147	Oxygen 61	25100	DGX 500	29147	SY 77	28107
PRP 800	29130	Novation 49	25083	DGX 505	29148	SY 85	28106
KAWAI		61 ES	28101	DGX 520	29136	Tyros 2/3/4/5-61T	29114
CA-X	29147	OBERHEIM		DGX 630/640/650/660	29147	Tyros 5 - 76 T	29136
EP2	29138	MC 200/EX	29130	EZ-200/220	25097	YPP 15/35	29098-28098
ES 1/3/4/5/6/7/8	29138	MC 3000	29131	Genos	29124	YPT 240	25097
ES 100/110	25133	ROLAND		KX 61	25097		
MP 4/5/6/7	29138	AX 09	25083	KX 88	29145		
MP 8/8 II	29147	AX Synth	25125	MO 6	28106		
MP 10	29140	BK 3/BK 5	28106	MO 8	29136		
MP 9500/11	29147	E 09/09W	28106	MOXF 6	28106		
KETRON		E 50/EA 7	28106	MM 8	29136		
Audya 5	28098-29098	E 60	29131	Motif6/ES6/Montage6	28107		
GP 50 classic	29131	EP 880	29131	Motif7/ES7/Montage7	29127		
SD 5	29114	Fantom G6	29114	Motif8/ES8/Montage8	29148		
SD 7/SD 9	29113	Fantom G7	29131	Motif XF 6	28106		
KORG		Fantom G8	29148	Motif XF 7	29127		
AX 1500 G	25048	F-20	29130	Motif XS 6	28107		
CX 3	28107	FC 300	25060	Motif XS 7	29127		
D 3200	28056	FP 4/4F	29138	Motif XS 8	29148		
EC 120/150	29147	FP 7/7F	29138	MX 49 61 Tasten	28101		
Grandstage 88	29130	FP-30	25133-29130	NP 11/12	25104		
Havian 30	29131	FP-50	25133-29138	NP 30/31/32	25125		
King Korg	28101	FP-60	29130	NP-V60/V80	25127		
Kronos 61 Tasten	28106	FP 80/90	29142	P 35/45/105/115/125	25133		

Alle Angaben ohne Gewähr
Stand: 12/19